

AirSensor PIR.C 101

Function:

Can identify day and night: The consumer can adjust working state in different ambient light. It can work in the daytime and at night when it is adjusted on the "sun" position (max). It can work in the ambient light less than 3LUX when it is adjusted on the "3" position (min). As for the adjustment pattern, please refer to the testing pattern

Time-Delay is added continually: When it receives the second induction signal within the first induction, it will restart to time from that moment.







Installation Advice:

As the detector responds to changes in temperature, avoid the following situations:

- Avoid pointing the detector towards objects with highly reflective surfaces, such as mirrors etc.
- Avoid mounting the detector near heat sources, such as heating vents, air conditioning units, lights etc
- Avoid pointing the detector towards objects that may move in the wind, such as curtains, tall plants etc

Connection:








Warning. Danger of death through electric shock!



- Must be installed by a professional electricial Disconnect power source.
- Cover or shield any adjacent live components. Ensure device cannot be switched on. Ensure that the power supply is disconnected.
- Swing the plastic cover a little and adjust TIME and LUX knobs.
- Unload the transparent vinyl cover, loosen the screws in the connection terminal, and then connect the power to connection terminal of sensor according to connection-wire diagram.
- Fold the metal spring of the sensor upwards, until they are in "I" position with sensor, and then put the sensor into the hole or installation box which is on the ceiling and is of a size similar to the sensor. Releasing the spring, the sensor will be set in this installation position.
- After finishing installing, turn on the power and then test it.

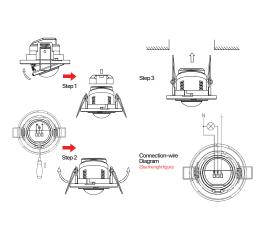

Sensor Information:







Test:





Switch on the power; the sensor and its connected lamp will have no signal at the beginning. After a 30-second warr-up, the sensor will start working. If the sensor receive the induction signal, the lamp will turn on. When there isn't an induction signal, the load will stop working within 10sec±3sec and the lamp will turn off.

n the LUX knob anti-clockwise to the minimum (3). If the ambient light is more than 3LUX, sensor will not work and the lamp will stop working too. If the ambient light is less than 3LUX kness), the sensor will work. Under no induction signal condition, the sensor will stop king within 10sec=3sec.

Note: when testing in daylight, please turn LUX knob to (sun) position, otherwise the sensor lamp will not work! If the lamp is more than 60W, the distance between lamp and sense should be 60cm at least.

Some Problems & Their Solutions:

he load does not work:





support@whitelion.in | www.whitelion.in

